

PH CAGE™ Acute Removal Technique



Acute Removal: Intra-operative removal of the CAGE after initial delivery and expansion

Note: Prior to CAGE removal, ensure all screws are removed

1 Disengage Tail Screw



Locked




Unlocked

- Use the H10 solid driver, 160mm

2a

Insert Acute Removal Connector (ARC) - Delivery Tail Attached

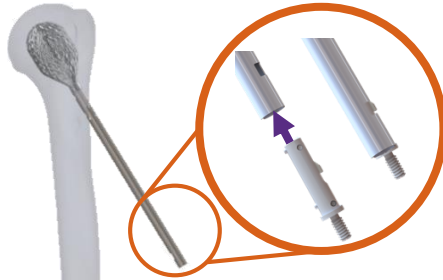


- Insert ARC into back of tube so threads are sticking out of tube. ARC will click in place

-OR-

2b

Insert Acute Removal Extension (ARE) - Delivery Tail Removed

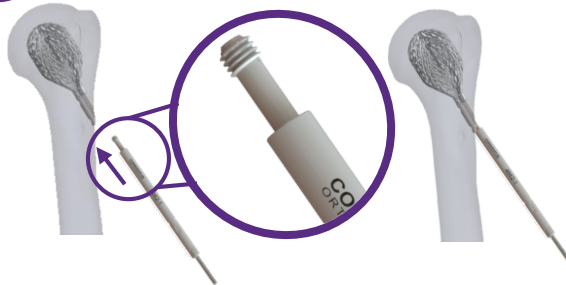

- Insert the short threads into the CAGE tail

3

Attach & Retract Delivery Tube



- Reassemble Delivery Tube, if removed, and turn gray knob on Delivery Handle clockwise until full stop

4

Attach Handle & Retract PH CAGE



- To attach the Delivery Handle, slide Delivery Tube over Delivery Tail/ARE and rotate the black body clockwise to engage the threads on the ARC/ARE
- Rotate gray knob counter-clock-wise. When fully retracted, remove CAGE

Note: ARC can be removed from Cage Delivery Tube by depressing locking tab and pulling.

